



User Manual

Thermostat 560

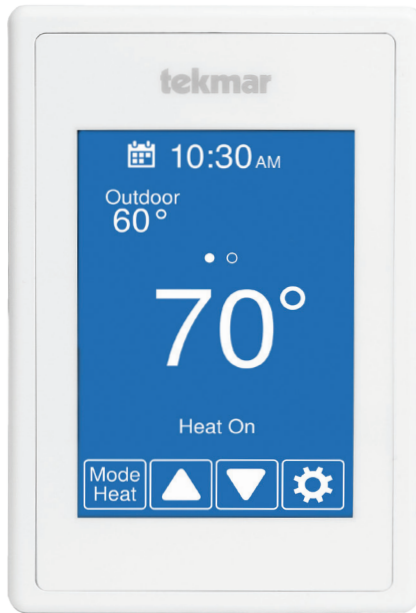

Home Screen

After 60 seconds of inactivity, the thermostat home screen displays only the time and the temperature.

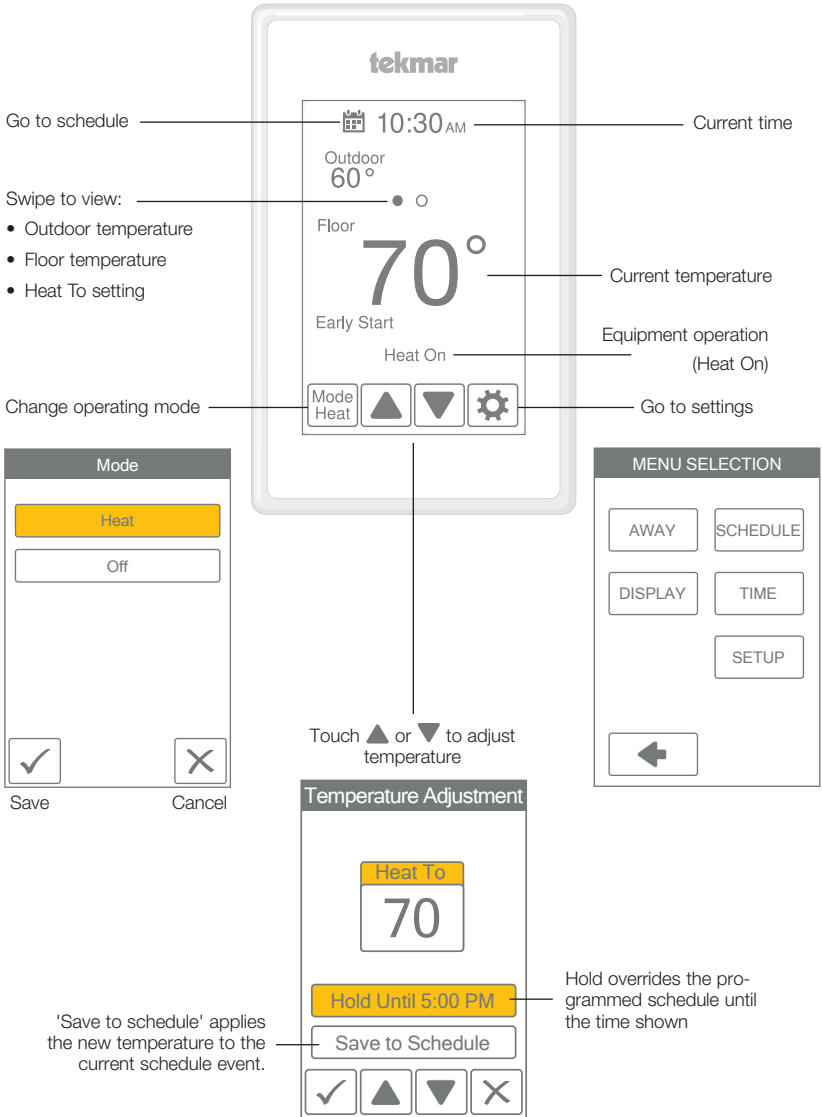

User Settings

Away

Use the Away setting to save energy when the building is unoccupied

Operates normally — At Home

Operates using the Away temperature selected in the Setup menu — Away

Save —

Info —

- The Away temperature can be adjusted in the Setup / Temps menu.

Schedule

Current group of program days. — Schedule — Go to the next group of program days.

Wake 6:00 AM 70° — Heating temperature

Leave 8:00 AM 65°

Return 6:00 PM 70°

Sleep 10:00 PM 65°

Early Start anticipates the time required to heat a room and starts early. — Early Start On

Set to On to follow the schedule. Set to Off to use the same temperature all of the time. — Schedule On

Creates a new schedule. — New Schedule

Wake On Skip — Select skip if you don't want a temperature change.

Set schedule start time — 6:00 AM

Set heating temperature — Heat to 70°

Display

DISPLAY 1/2

Select °F or °C — Temperature Units: °F

Brightness when touching the display — Energy Use: Monthly — Energy use. See below.

Brightness - Active: 80%

Brightness - Inactive: 50% — Brightness after 60 second timeout of no use

Choose the background color — Theme: Light

Language: English — Select English, French or Spanish

← ▲ ▼

DISPLAY OPTIONS 2/2

10 second count down to allow the screen to be cleaned with a moist cloth. — Clean Screen: Off

Select if the outdoor temperature is shown when inactive — Inactive Time Display: On — Select if the time is shown when inactive

Inactive Outdoor Display: Off

← ▲ ▼

Energy Use

Daily Usage

Today	0 hrs
Yesterday	0 hrs
Tue	0 hrs
Mon	0 hrs
Sun	0 hrs
Sat	0 hrs
Fri	0 hrs

View each day's run time for heating.

✓ Monthly Usage ⓘ

Toggle between Daily and Monthly Usage.

Time

TIME & DATE

Aug 25 2016

1 30 PM

▲ ▲ ▲

▼ ▼ ▼

✓ OPTIONS ⓘ

The time and date is manually set by highlighting a field and then using the ▲ or ▼ buttons.

Time options are:

- 12 hour or 24 hour time format
- Daylight savings time

Page left intentionally blank

Page left intentionally blank

Need help? Go to our website or contact us.

watts.com/tekmar | tekmar.customerservice@wattswater.com | 1-800-438-3903

tekmar[®]

A **WATTS** Brand

Tel: 1-800-438-3903 • Fax: (250) 984-0815
watts.com/tekmar