




ON-OFF FLOAT VALVE (6" and Larger)

03/06

970 Series

—Model— **972-19**
672-19

- Opens when float reaches low level stop
- Closes when float reaches high level stop
- Adjustable Opening and Closing Speed
- Low and High Level stop collars are adjustable

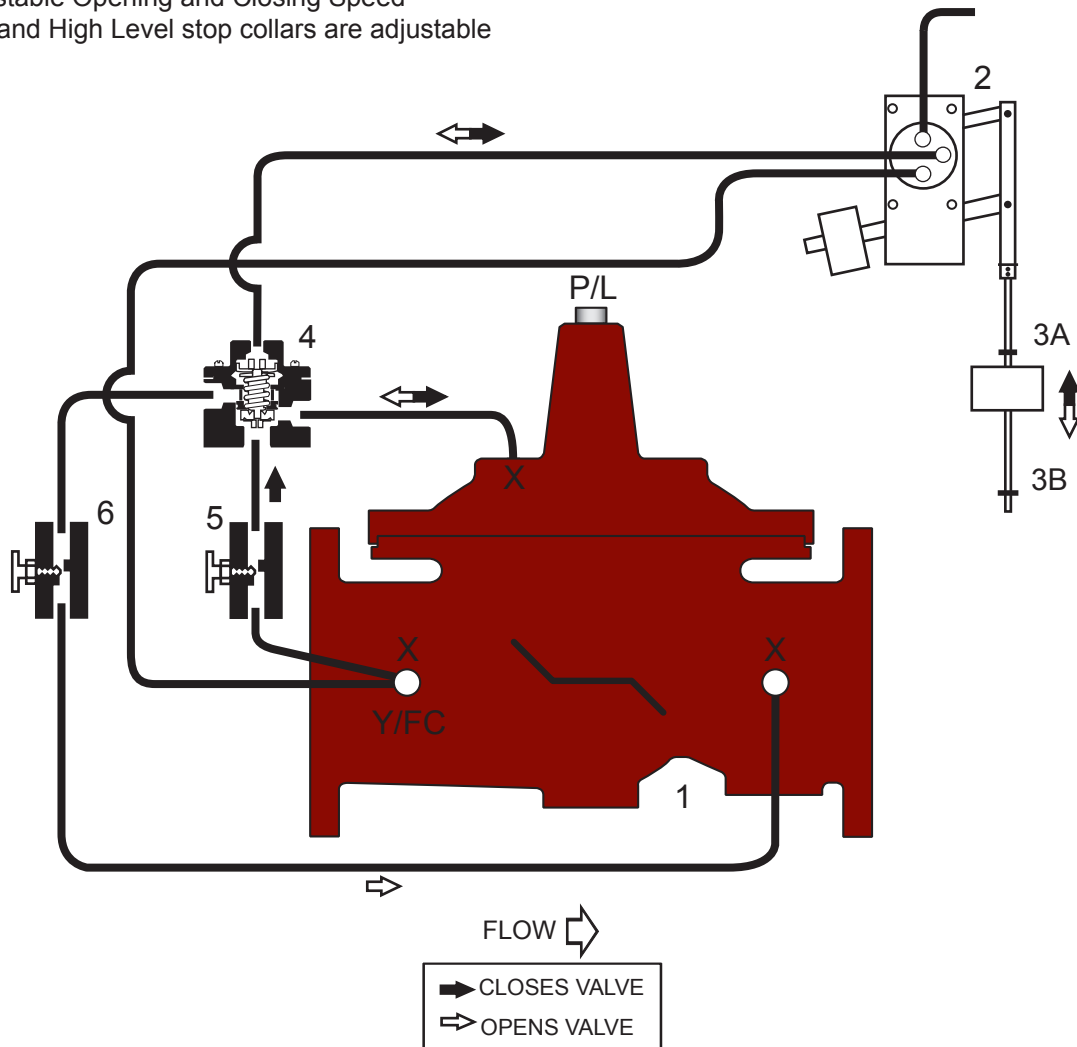

STANDARD COMPONENTS

- | | |
|---------------------------------|------------------------------------|
| 1 - Main Valve (Single Chamber) | 4 - Model 22-1 Accelerator Control |
| 2 - On-Off Float Control | 5 - Adjustable Closing Speed |
| 3A - High Level Adjustment Stop | 6 - Adjustable Opening Speed |
| 3B - Low Level Adjustment Stop | |

OPTIONS and ACCESSORIES

- X - Isolation Cocks
- FC - Flo-Clean Strainer
- Y - Y-Strainer (Replaces Flo-Clean)
- AOS - Adjustable Opening Speed
- P - Position Indicator
- L - Limit Switch