




ON-OFF FLOAT VALVE with PRESSURE SUSTAINING FEATURE

03/06

970 Series

—Model— **972-20**
672-20

- Opens when float reaches low level stop
- Closes when float reaches high level stop
- Throttles to maintain minimum upstream pressure during fill cycle
- Adjustable Opening and Closing Speed
- Low and High Level stop collars are adjustable

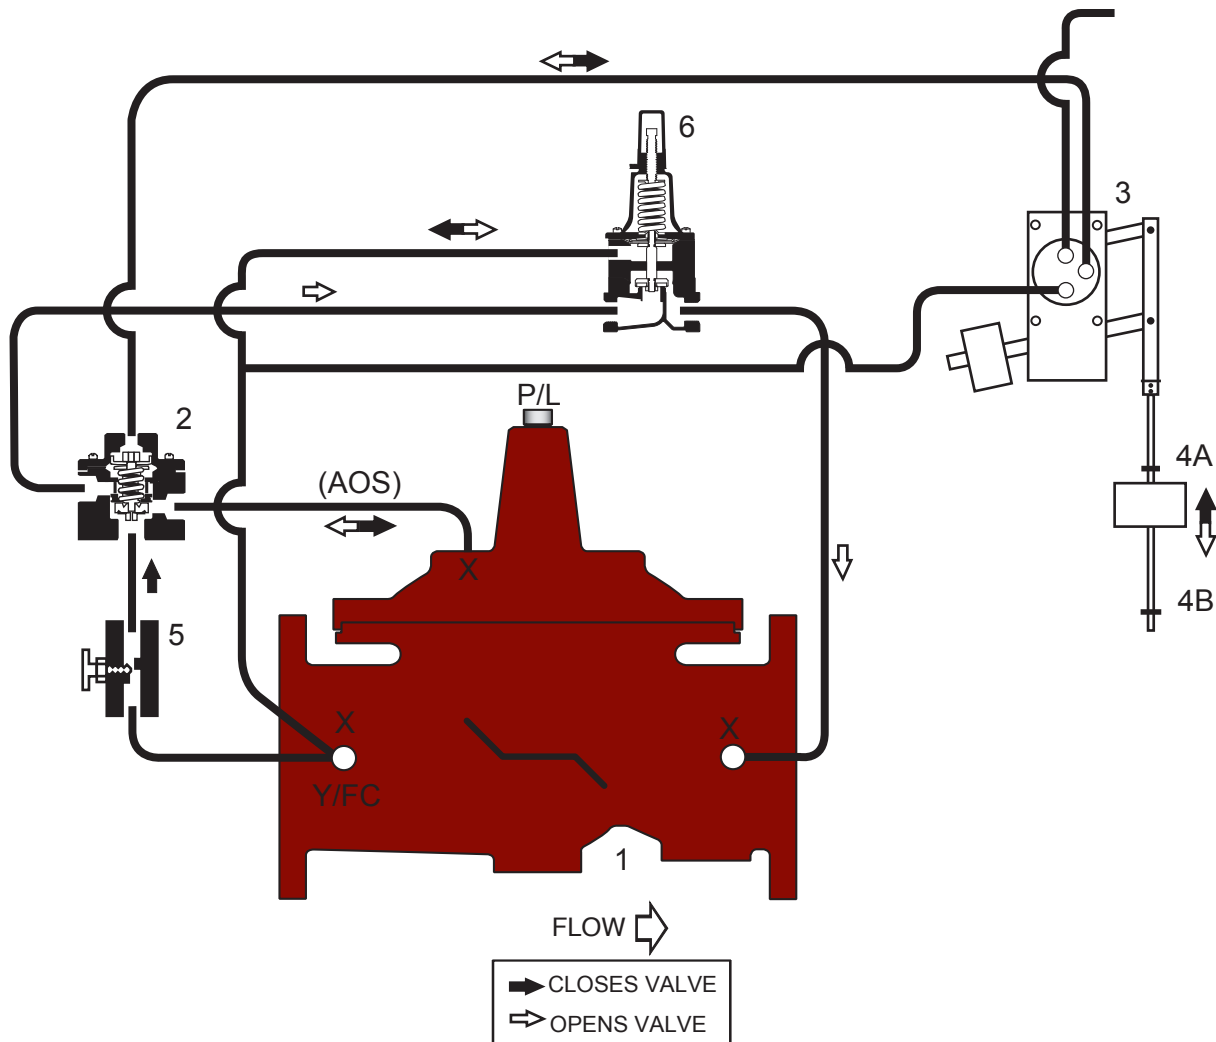

STANDARD COMPONENTS

- | | |
|----------------------------------|---------------------------------|
| 1 - Basic Valve (Single Chamber) | 5 - Adjustable Closing Speed |
| 2 - Model 22 Accelerator Control | 6 - Pressure Sustaining Control |
| 3 - On-Off Float Control | |
| 4A - High Level Adjustment Stop | |
| 4B - Low Level Adjustment Stop | |

OPTIONS and ACCESSORIES

- X - Isolation Cocks
- FC - Flo-Clean Strainer
- Y - Y-Strainer (Replaces Flo-Clean)
- AOS – Adjustable Opening Speed
- P - Position Indicator
- L - Limit Switch