




ON-OFF FLOAT VALVE (4" and Smaller)

03/06

970 Series

—Model— **972**
672

- Opens when float reaches low level stop
- Closes when float reaches high level stop
- Low and High Level stop collars are adjustable

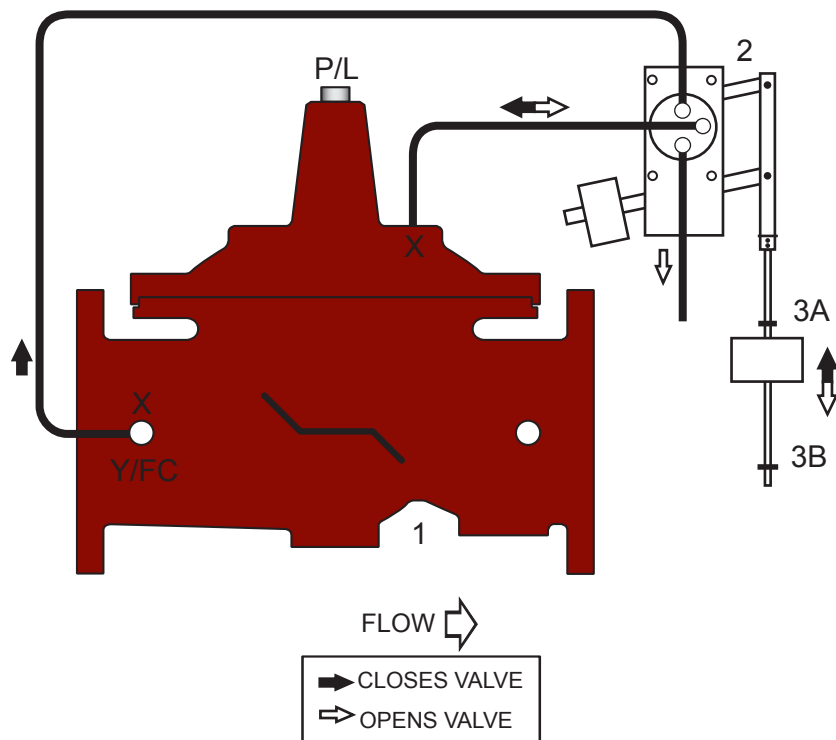

STANDARD COMPONENTS

- 1 - Main Valve (Single Chamber)
- 2 - On-Off Float Control
- 3A - High Level Adjustment Stop
- 3B - Low Level Adjustment Stop

OPTIONS and ACCESSORIES

- X - Isolation Cocks
- FC - Flo-Clean Strainer
- Y - Y-Strainer (Replaces Flo-Clean)
- AOS – Adjustable Opening Speed
- P - Position Indicator
- L - Limit Switch