


**tekmar**<sup>®</sup>

Replacement Kit for Snow Sensor 095

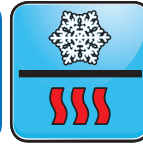

Snow Melting Replaces: New

**M3065\_D**

06/13

# Installation & Operation Manual

## Introduction

The M3065 replaces the blue sensor disk of the Snow Sensor 095.



## Installation

### **⚠ WARNING**

It is the installers responsibility to ensure that this sensor is safely installed according to all applicable codes and standards. tekmar is not responsible for damages resulting from improper installation and/or maintenance.



Read this Manual **BEFORE** using this equipment.

Failure to read and follow all safety and use information can result in personal injury, property damage, or damage to the equipment.

Keep this Manual for future reference.

### **Step 1 - Check the Contents**


Check the contents of this package. If any of the contents listed are missing or damaged, please refer to the Limited Warranty and Product Return Procedure on the back of this brochure and contact your wholesaler or tekmar sales representative for assistance.

Type M3065 includes • One Blue Replacement Sensor Disk for Snow Sensor 095  
• One Installation and Operation Manual M3065\_D.

## Step 2 - Disassembly


1. Remove the outer ring by pulling up on the three catches.
2. Remove the three screws.
3. Remove the blue sensor disk from the sensor enclosure.

**Avoid scratching any part of the surface of the blue sensor disk. Scratches will result in corrosion not covered by warranty.**

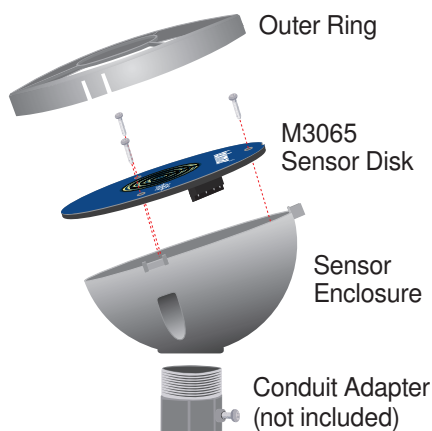

## Step 3 - Wiring

Remove the wiring terminal block by pulling up from the blue sensor disk. Connect the 4 conductor wire to the yellow (YEL), blue (BLU), red (RED) and black (BLK) wiring terminations. If the installed 4 conductor cable uses a different color code, then make a note of the wire color versus the wiring terminal color names. Push the wiring terminal plug onto the pins of the blue sensor disk. At the Snow Melting Control location, connect the corresponding wires to the yellow, blue, red and black wire terminations.

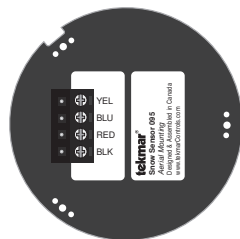

## Step 4 - Assembly

1. Align the blue sensor disk tekmar logo with the highest point of the sensor enclosure body. The blue sensor disk has a notch that ensures the sensor is installed in the correct position.
2. Insert the three screws into the holes and screw them until tight. Do not over tighten.
3. Align the three notches of the outer ring with the sensor body and push down until each of the three corners have snapped on tight.

## Maintenance

The sensor is installed in a harsh environment. Accumulation of dirt on the surface of the sensor may affect snow detection. The sensor should be checked on a periodic basis and, when necessary, cleaned.

1. Remove the outer ring by pulling up on the three catches.
2. A cloth with warm soapy water can be used to clean any dirt.
3. Rinse with water.
4. Align the three notches of the outer ring with the sensor body and push down until each of the three corners have snapped on tight.

## Testing and Troubleshooting

If the Snow Melt Control shows an error message describing a sensor failure, perform the following test procedure:

- The 4 conductor wires at the sensor should be disconnected.
- Use a good quality electrical testing meter with an ohm scale range of 0 to 2,000,000 Ohms.

Using the ohmmeter and standard testing practices, measure the resistance between:

1. The yellow (YEL) and black (BLK) wiring terminals to measure a 10 kΩ sensor and use the Temperature vs. Resistance Table to calculate the approximate temperature reading. Measure the surface temperature of the 095 blue sensor disk and compare versus the yellow to black temperature reading.
2. Measure the resistance between the blue (BLU) and black (BLK) wiring terminals. When the sensor surface is clean and dry, the reading should be 2,000,000 Ohms. When the sensor surface is wet it should be between 10,000 and 300,000 Ohms.
3. Measure the resistance between the red (RED) and black (BLK) wiring terminals This reading should be between 45 to 47 Ohms.

If resistance readings are outside of the normal operating range, the sensor has failed.

### Temperature vs. Resistance Table

Temperature		Resistance	Temperature		Resistance	Temperature		Resistance
°F	°C	Ω	°F	°C	Ω	°F	°C	Ω
-50	-46	490,813	45	7	22,763	140	60	2,490
-45	-43	405,710	50	10	19,900	145	63	2,255
-40	-40	336,606	55	13	17,436	150	66	2,045
-35	-37	280,279	60	16	15,311	155	68	1,857
-30	-34	234,196	65	18	13,474	160	71	1,689
-25	-32	196,358	70	21	11,883	165	74	1,538
-20	-29	165,180	75	24	10,501	170	77	1,403
-15	-26	139,402	80	27	9,299	175	79	1,281
-10	-23	118,018	85	29	8,250	180	82	1,172
-5	-21	100,221	90	32	7,334	185	85	1,073
0	-18	85,362	95	35	6,532	190	88	983
5	-15	72,918	100	38	5,828	195	91	903
10	-12	62,465	105	41	5,210	200	93	829
15	-9	53,658	110	43	4,665	205	96	763
20	-7	46,218	115	46	4,184	210	99	703
25	-4	39,913	120	49	3,760	215	102	648
30	-1	34,558	125	52	3,383	220	104	598
35	2	29,996	130	54	3,050	225	107	553
40	4	26,099	135	57	2,754			

## Technical Data

### Replacement Kit for Snow Sensor 095 M3065

Literature	M3065_D
Packaged weight	0.1 lbs (45 g)
Dimensions	9/16" H x 2-3/4" O.D. (16 H x 70 O.D. mm)
Operating range	-40 to 122°F (-40 to 50°C)

## Limited Warranty and Product Return Procedure

**Limited Warranty** *The liability of tekmar under this warranty is limited. The Purchaser, by taking receipt of any tekmar product ("Product"), acknowledges the terms of the Limited Warranty in effect at the time of such Product sale and acknowledges that it has read and understands same.*

The tekmar Limited Warranty to the Purchaser on the Products sold hereunder is a manufacturer's pass-through warranty which the Purchaser is authorized to pass through to its customers. Under the Limited Warranty, each tekmar Product is warranted against defects in workmanship and materials if the Product is installed and used in compliance with tekmar's instructions, ordinary wear and tear excepted. The pass-through warranty period is for a period of twenty-four (24) months from the production date if the Product is not installed during that period, or twelve (12) months from the documented date of installation if installed within twenty-four (24) months from the production date.

The liability of tekmar under the Limited Warranty shall be limited to, at tekmar's sole discretion: the cost of parts and labor provided by tekmar to repair defects in materials and / or workmanship of the defective product; or to the exchange of the defective product for a warranty replacement product; or to the granting of credit limited to the original cost of the defective product, and such repair, exchange or credit shall be the sole remedy available from tekmar, and, without limiting the foregoing in any way, tekmar is not responsible, in contract, tort or strict product liability, for any other losses, costs, expenses, inconveniences, or damages, whether direct, indirect, special, secondary, incidental or consequential, arising from ownership or use of the product, or from defects in workmanship or materials, including any liability for fundamental breach of contract.

The pass-through Limited Warranty applies only to those defective Products returned to tekmar during the warranty period. This Limited Warranty does not cover the cost of the parts or labor to remove or transport the defective Product, or to reinstall the repaired or replacement Product, all such costs and expenses being subject to Purchaser's agreement and warranty with its customers.

Any representations or warranties about the Products made by Purchaser to its customers which are different from or in excess of the tekmar Limited Warranty are the Purchaser's sole responsibility and obligation. Purchaser shall indemnify and hold tekmar harmless from and against any and all claims, liabilities and damages of any kind or nature which arise out of or are related to any such representations or warranties by Purchaser to its customers.

The pass-through Limited Warranty does not apply if the returned Product has been damaged by negligence by persons other than tekmar, accident, fire, Act of God, abuse or misuse; or has been damaged by modifications, alterations or attachments made subsequent to purchase which have not been authorized by tekmar; or if the Product was not installed in compliance with tekmar's instructions and / or the local codes and ordinances; or if due to defective installation of the Product; or if the Product was not used in compliance with tekmar's instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, WHICH THE GOVERNING LAW ALLOWS PARTIES TO CONTRACTUALLY EXCLUDE, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, DURABILITY OR DESCRIPTION OF THE PRODUCT, ITS NON-INFRINGEMENT OF ANY RELEVANT PATENTS OR TRADEMARKS, AND ITS COMPLIANCE WITH OR NON-VIOLATION OF ANY APPLICABLE ENVIRONMENTAL, HEALTH OR SAFETY LEGISLATION; THE TERM OF ANY OTHER WARRANTY NOT HEREBY CONTRACTUALLY EXCLUDED IS LIMITED SUCH THAT IT SHALL NOT EXTEND BEYOND TWENTY-FOUR (24) MONTHS FROM THE PRODUCTION DATE, TO THE EXTENT THAT SUCH LIMITATION IS ALLOWED BY THE GOVERNING LAW.

**Product Warranty Return Procedure** All Products that are believed to have defects in workmanship or materials must be returned, together with a written description of the defect, to the tekmar Representative assigned to the territory in which such Product is located. If tekmar receives an inquiry from someone other than a tekmar Representative, including an inquiry from Purchaser (if not a tekmar Representative) or Purchaser's customers, regarding a potential warranty claim, tekmar's sole obligation shall be to provide the address and other contact information regarding the appropriate Representative.

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information: [www.watts.com/prop65](http://www.watts.com/prop65)



Product design, software and literature are Copyright ©2013 by tekmar Control Systems Ltd., A Watts Water Technologies Company. Head Office: 5100 Silver Star Road, Vernon, B.C. Canada V1B 3K4, 250-545-7749, Fax. 250-545-0650 Web Site: [www.tekmarControls.com](http://www.tekmarControls.com)